 


PortegeTM

7010CT

BATTERY PACK REMOVAL




- 1 Turn the computer upside down as shown
- 2 Push the **battery lock** to unlock position
- 3 Slide the **battery release lever** in the direction of the arrow
- 4 Pull the **battery pack** slightly forward and lift it out

OPTIONAL PCMCIA CARD REMOVAL



- 1 Pull out the **eject lever** of the PC card to be removed
- 2 Slide the **eject lever** to the right until the PC card is out
- 4 Grasp the PC card and remove it

EXPANSION MEMORY REMOVAL

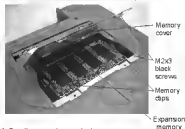

- 1 Turn the computer upside down
- 2 Remove **two M2x3 black screws** and remove the **memory cover**
- 3 Push the **memory clips** outward and pull the **expansion memory** out of the connector on a 45 degree angle

HDD REMOVAL



- 1 Turn the computer upside down
- 2 Remove **one M2x14 black screw** securing the **HDD cover** and lift the cover out

TOSHIBA

Tough Enough for Today's World.

Portege™

7010CT

HDD REMOVAL



HDD

Plastic handle

- 3 Grasp the **plastic handle** and pull it towards your left to disconnect the HDD
- 4 Lift up the **plastic handle** to remove the HDD

CAUTION: Be very careful not to press on the TOP or BOTTOM of the HDD. Pressure can destroy data or damage the drive.

KEYBOARD REMOVAL



Keyboard cable

P.J10

- 4 Lift the front of the **keyboard** pulling the keyboard forward until the keyboard cable is exposed
- 5 Disconnect the **keyboard cable** from P.J10 on the system board and remove the **keyboard**

KEYBOARD REMOVAL



LATCH



Keyboard

Keyboard holder

- 1 Turn the computer right side up and open the display
- 2 Unlatch the **Keyboard holder** at the five points starting from the front side
- 3 Pull up on the front of the **keyboard holder** to release the latches along the back and lift the holder out

TOP COVER REMOVAL



- 1 Turn the computer upside down
- 2 Remove **two** screws securing the **docking connector cover** and lift the cover out
- 3 Remove the following screws securing the bottom cover
 - 7 M2.5x6 black screws
 - 2 M2x6 black screws
 - 2 M2x14 black screws

TOSHIBA

Tough Enough for Today's World.

FIELD REPLACEABLE UNIT DOCUMENTATION

 
Portege™

7010CT

TOP COVER REMOVAL



- 4 Turn the computer right side up and open the cover
- 5 Use a tweezer to gently remove the LCD cable from PJ3 and the FL inverter cable from PJ4
- 6 Disconnect the membrane switch cable from PJ9.
- 7 Remove one M2x6 silver screw



- 8 Lift up the front of the top cover and tilt the display back until it lies flat
- 9 Disconnect the LED/Speaker cable to separate the top cover with display assembly from the bottom cover

RTC BATTERY REMOVAL



- 1 Disconnect the RTC battery cable from PJ12
- 2 Remove the tape securing the battery cable
- 3 Lift out the RTC battery

SYSTEM BOARD REMOVAL




- 1 Remove one M2x6 black screw securing the LED board and disconnect the board from PJ32

TOSHIBA


Tough Enough for Today's World.

Portege™ 7010CT

SYSTEM BOARD REMOVAL

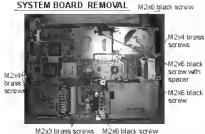


2. Remove 13 screws securing the system board
 - 6 M2x4 brass screws
 - 2 M2x6 black screws with plastic spacers
 - 3 M2x6 black screws
 - 2 M2x3 brass screws

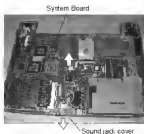

3. Remove the sound jack cover in the direction of the arrow
4. Lift out the system board.
5. Disconnect the DC IN cable from PJ802 on the back of the system board

PC CARD SLOT REMOVAL

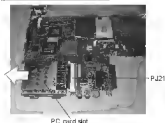

1. Disconnect the PC card slot from PJ21 on the system board

MODEM REMOVAL



1. Grasp the modem
2. Pull the modem and disconnect it from PJ7 on the system board
3. Lift the insulator off the modem board
4. Disconnect the modem jack cable from PJ110 on the modem board

TOSHIBA

Tough Enough for Today's World.

PortegeTM

7010CT

CPU REMOVAL



CPU
board

- 1 Disconnect the CPU board from the system board.

CAUTION Grip the CPU evenly on both sides of the connector. **DO NOT** apply excessive pressure to the connectors. Lift straight up to partially disconnect the CPU. A small tongue on the CPU module extends beyond the other side of the system board so be careful not to pull up too far. Slowly twist up the outside edge of the CPU board to remove it.

I/O BOARD REMOVAL



I/O board
I/O board
plate

M2x4 silver screws

- 1 Remove **six M2x4 silver screws** securing the I/O board plate.
- 2 Pull out the **I/O board plate**.
- 3 Disconnect the I/O board from the system board.

TOSHIBA

Tough Enough for Today's World.

Portege™

7010CT

DISPLAY MASK REMOVAL



Latch



- 1 Remove **four plastic seals** at the corners of the display assembly
- 2 Remove **four M2.5x5 flat head silver screws**
- 3 There are **16 latches** securing the display mask. Carefully insert your fingers between the **display mask** and the **LCD panel** and pry open the latches starting from the **top two latches** to the **four latches on the right and left sides** ending with the **six bottom latches**

FL INVERTER AND LCD REMOVAL



- 1 Remove **one M2x5 flat head brass screw** securing **FL inverter board**
- 2 Lift up the **FL inverter board** and disconnect the **FL cable** from CN2 and the **FL inverter cable** from CN1
- 3 Remove **three M2x4 flat head brass screws** securing the LCD module
- 4 Carefully rotate the **LCD module** from right to left off the LCD cover
- 5 Disconnect the **LCD cable** from the **LCD module** and remove the LCD from the computer

TOSHIBA

Tough Enough for Today's World.